



 
# Display Board

## Hanging recommendations

### Free hanging signs


We recommend that no matter what system is used to hang KATZ DISPLAY BOARD outdoor (wire hooks, nylon, string, chain etc.) the system should hang perpendicular to or directly from above. This option induces no tension to KATZ DISPLAY BOARD.

If it is not possible to hang perpendicular then the hanging system should hang at a slight outward angle. The hanging system should never be slanted inwards, as this will cause the board to curl or bow.

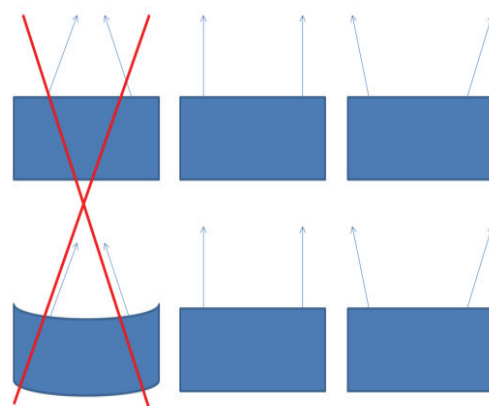

### Please consider the size of the sign:

 We recommend that the holes or clamps for holding up the sign should not be more than 40cm apart. This means that larger signs should have more hanging units. When punching holes, they should be between 10mm and 50mm from the upper and side edges of the sign depending on the size of the sign. Best results are achieved when using eyelets in the holes.

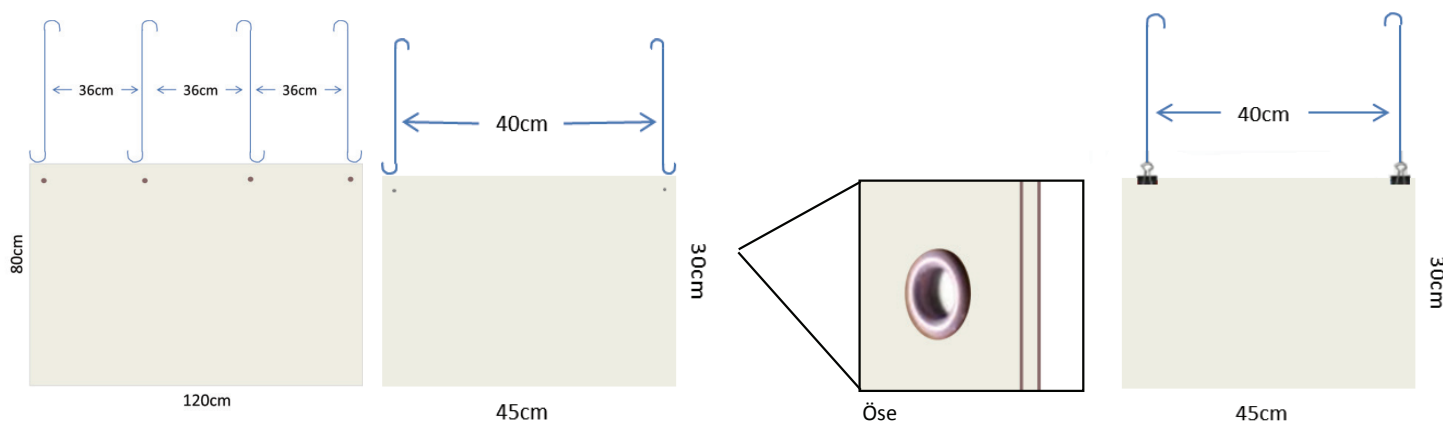





# Display Board

Hanging recommendations

## Free hanging signs with clamping profiles

KATZ DISPLAY BOARD can be hung by using a clamping profile.

  The profile should cover the complete top edge. It would be an advantage to have a bar on the bottom edge. The sides are open so that the KATZ DISPLAY BOARD can expand sideways.

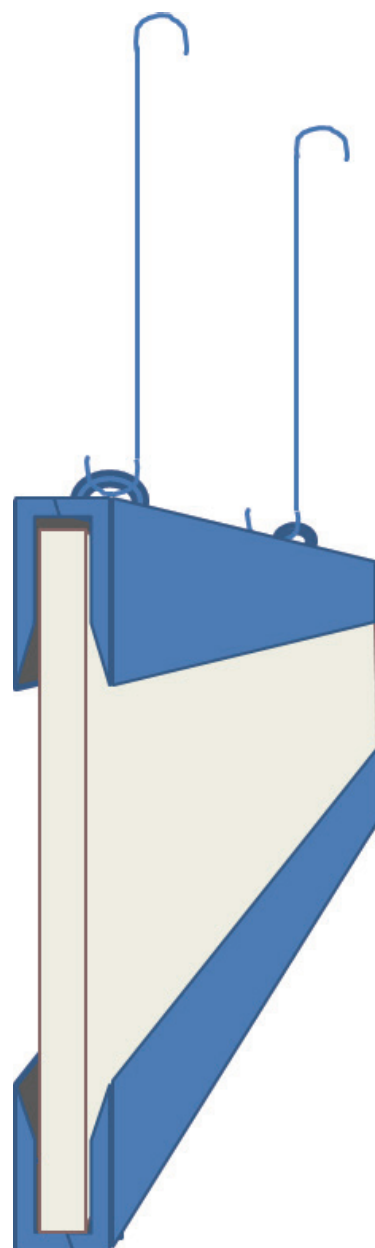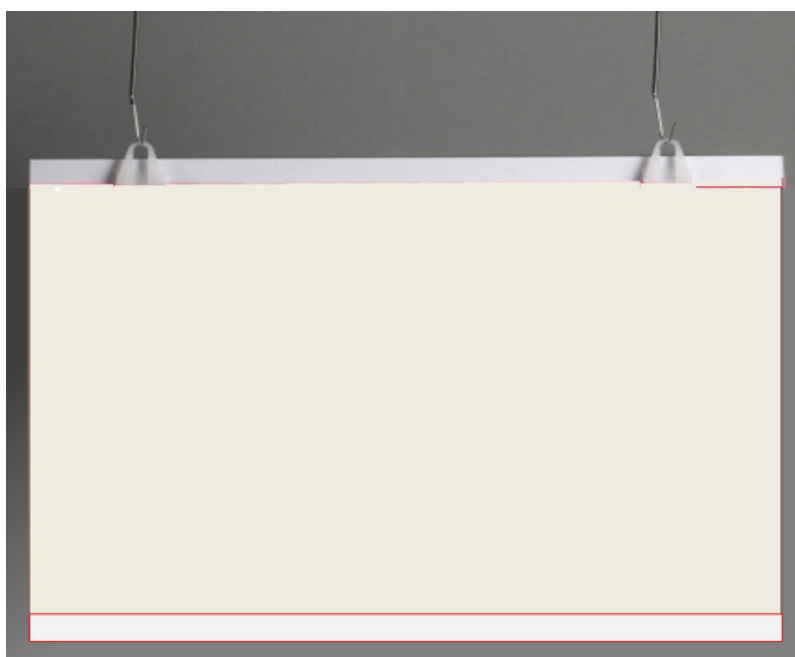

### Important:

Avoid windy or stormy situations with this type of hanging system.  
There is a danger of the signs being damaged and falling.



 
 
# Display Board

Hanging recommendations

## Hanging signs on fences

No matter how KATZ DISPLAY BOARD is hung on the fence (wire, string, cable ties, etc.) be sure that there is a bit of slack in the binding material.

Bind KATZ DISPLAY BOARD on all sides at several points. We would suggest with approximately 20cm between each bind. We recommend using eyelets to support the punched holes.

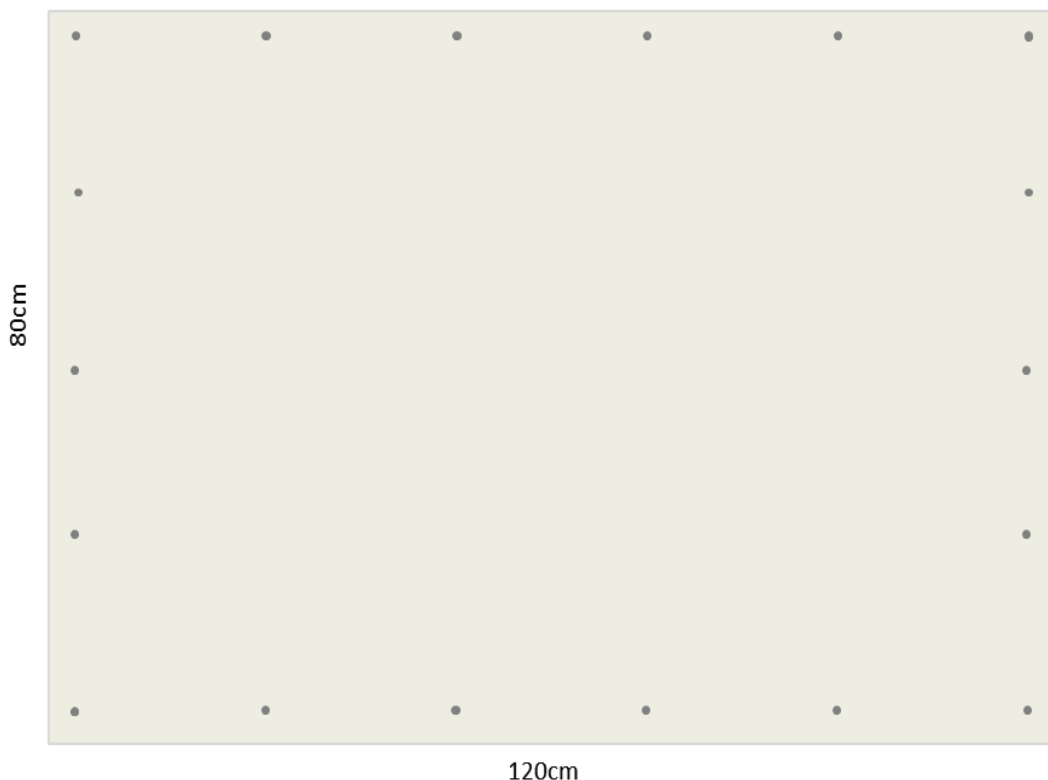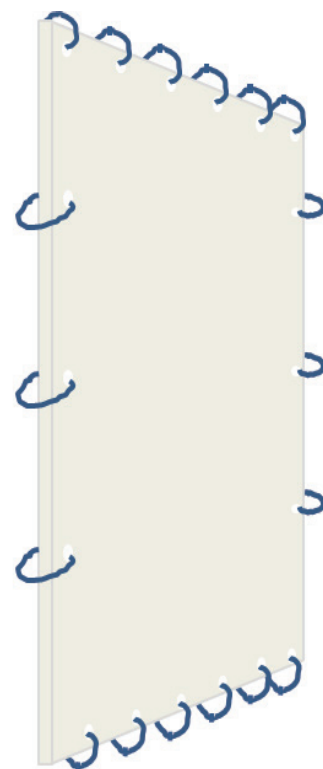




# Display Board

Hanging recommendations

## Hanging signs on walls

KATZ DISPLAY BOARD can be hung directly onto walls. The holes with eyelets should be larger than the screws so that the board has room to move.

 Use a washer between the head of the screw and the board.

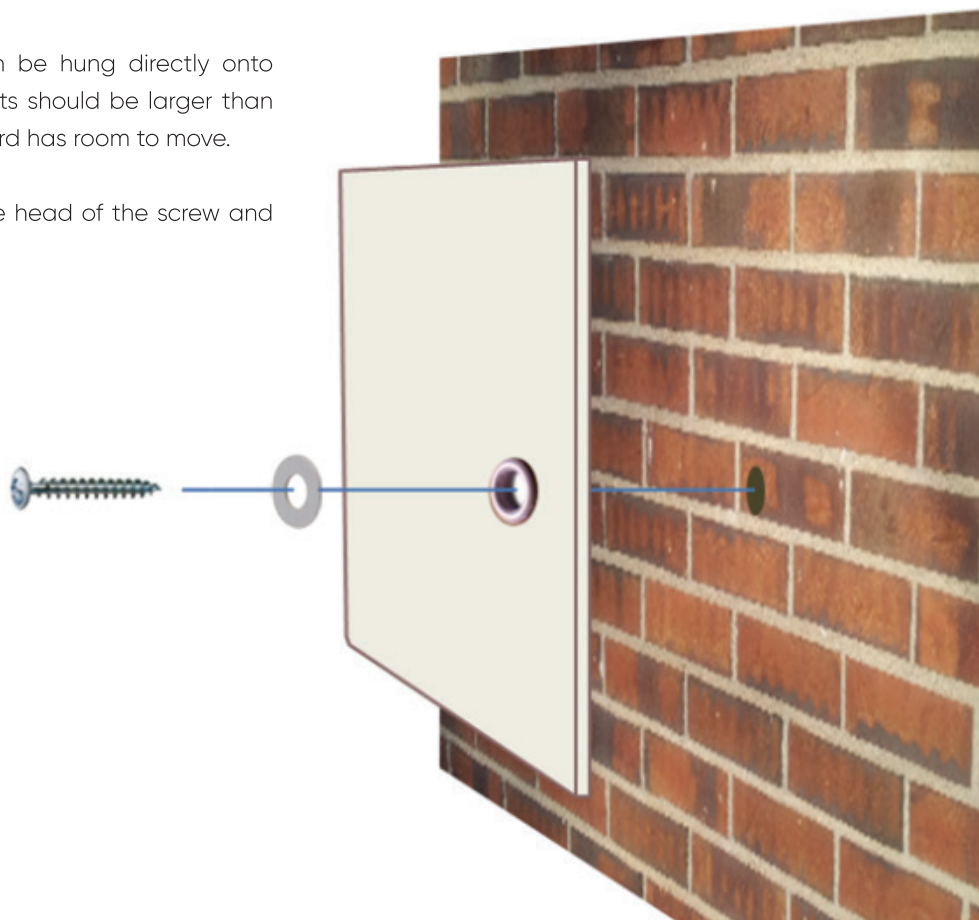



# Display Board

Hanging recommendations

Eingerahmte Schilder

KATZ DISPLAY BOARD can ideally be used in stopper signs or wall frames. There is no need to have a clear protective covering (plastic or glass).

We recommend not to use frames that will clamp the sign down but use a system that will let KATZ DISPLAY BOARD react to environmental influences.

## For example:

a system to just slip KATZ DISPLAY BOARD into the frame.





# Display Board

Hanging recommendations

 
 
## Signs on poles

KATZ DISPLAY BOARD can be hung around poles.

This type of signage is often used for elections campaigns, event advertising and promotions.

For example: KATZ DISPLAY BOARD is printed on one side then folded around the pole and fastened using cable ties for example.

The holes used to hang the sign to the pole (see encircled areas below) should not be wider than the pole. The ties need to be pulled relatively tight and would tear the sheet.

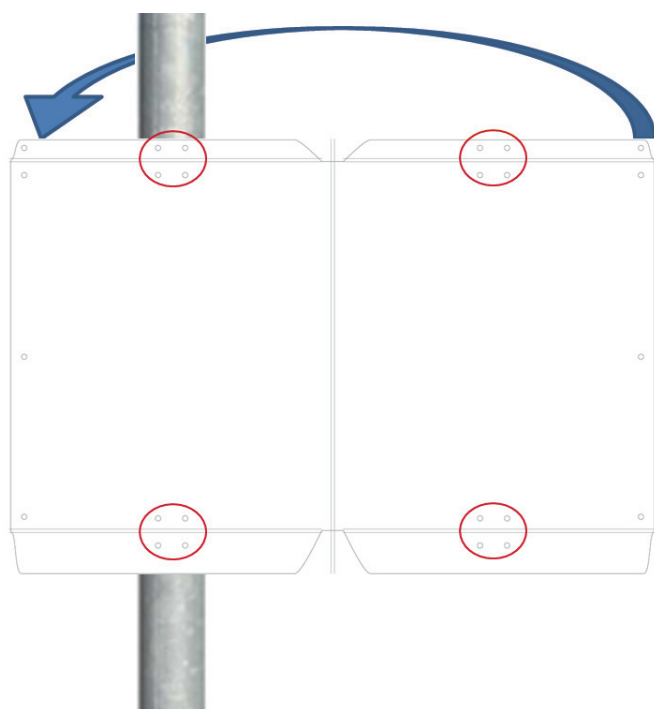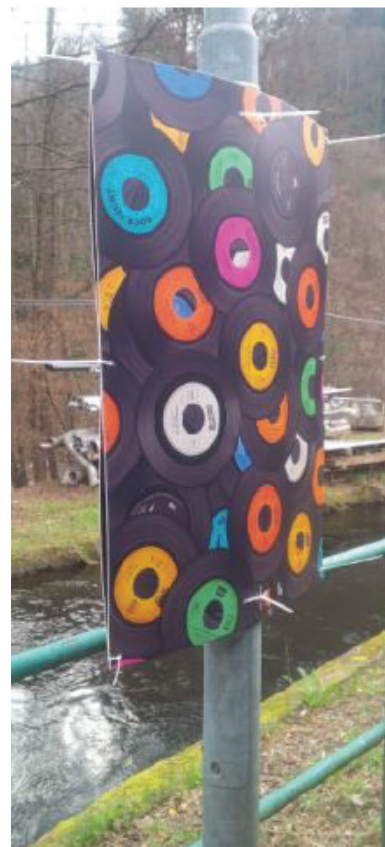



# Display Board

Hanging recommendations

Contact

**Philipp Reuter**

Junior Sales Manager KATZ Display Board

Phone +49 7224 647-206

Fax +49 7224 647 10-206

[philipp.reuter@thekatzgroup.com](mailto:philipp.reuter@thekatzgroup.com)